

Network Switch Set-up Guides

Netgear AV Line Switches

when used in a Blustream Video over IP system, in a single switch configuration system



Contents

Introduction	03
Switch Requirements	03
Network Topology for Multicast	03
Connecting to the Web GUI Interface	04
Firmware Update	05
Select Blustream Network Profile	06
Save Settings and Reboot	08
Changing Your Computer IP Address	09-12

BLUSTREA///-

Introduction

Blustream Video over IP solutions require a managed network switch in order for HDMI distribution to be achieved reliably, and without any loss of performance.

The following guide is a step-by-step instruction on how to connect and configure the Netgear AV Line network switch to support Blustream video over IP products.

Please ensure each step is followed, and checked at each stage. Before exiting the set-up, it is advisable to reboot the switch, login, and double check all settings. Failure to set up the switch correctly will likely result in the system not working as intended.

Switch Requirements

The following features need to be enabled on the network switch:

- 1. Multicast
- 2. Jumbo Frames / Jumbo Packets / MTU
- 3. IGMP Management / Snooping
- 4. PoE (where being utilised)

Feature explanation:

- **Multicast** (one-to-many or many-to-many distribution) is a group communication where information is addressed to a group of network devices simultaneously (Blustream video over IP products).
- Jumbo Frames / Jumbo Packets / MTU are Ethernet frames with more than 1,500 bytes of payload. Conventionally, jumbo frames can carry up to 9,216 bytes of payload and must be activated in order to send large packets of data for HDMI distribution. Without this enabled, the ability for the IP***UHD-TX units to transmit the HDMI data will not be achievable.
- IGMP Management & IGMP Snooping is the process of listening to Internet Group Management Protocol (IGMP) network traffic. The feature allows a network switch to listen in on the IGMP conversation between hosts, routers & receivers (IP***UHD Transmitters, the network switch, and IP***UHD Receivers). By listening to this flow of traffic the switch maintains a map of which links need which IP multicast streams i.e. which Blustream video over IP products are active and where the signal is being distributed to.
- **PoE** (Power over Ethernet) the Blustream IP***UHD and ACM devices are all capable of being powered by PoE. Power Supply Units are available for Blustream IP***UHD and ACM devices, however, the products are not sold with these included. PoE can be disabled on the switch if external PSU's are being used.

Network Topology for Multicast

Our recommendation for the set-up of a Blustream video over IP system would be to have the customers business, or home network be kept independent of the video distribution network. This negates the possibility of data flowing through one network reducing the performance of the other and vice-versa. The Blustream Advanced Control Module (ACM) will act as a "bridge" between the two networks allowing for control data to be seamlessly transmitted between the two networks.

Where the business / home network and video over IP network are sharing a switch/es (not recommended). We would suggest creating a separate VLAN for the video over IP network. A networking professional should be consulted when designing this type of system to ensure the networks can co-exist on the same infrastructure.

Connecting to the switch Web GUI Interface

To login into the Netgear network switch connect to the OOB (out of band) port, the factory default details are:

IP Address:	192.168.0.239
User:	admin
Password:	password

In order to connect to the network switch your computer will need to be physically connected to the Netgear switch using an Ethernet network cable to the OOB port. The computer must also be in the same IP range as the Netgear switch default IP address. If you are unsure how to update your computer IP range follow the 'Changing your computer IP address' instructions at the end of this guide.

- 1) Open your internet browser (Google Chrome, Safari, Mozilla, Internet Explorer etc)
- 2) Type the network switch default IP address into the web browser bar
- 3) Enter the default user name and password

If the switch is not using the factory default settings you will need to know these login details or have to factory reset the unit. For details how to factory reset the network switch please refer to the network switch user manual.

Please note: network switch manufacturers regularly update firmware on their switches. There may be differences in the layout and representation of the screenshots of the switch GUI within this guide as firmwares are updated.

NETGEAR[®]

Login Name	Main UI allows for advanced network configuration setup with additional network switching features.
Password 🔍	Main UI Login
AV UI Login	

All of the configuration will be carried out within the AV UI, so login using the "AV UI Login" option by entering the username and password.

On first login to a new, or factory reset unit, the password will need to be changed from the defualt (the username can be changed, but this is not mandatory). Please make a note of the new password - failure to do so will result in the switch having to be factory reset to access settings if the password is forgotten.

Firmware update

Before configuring the Netgear AV Line switch, it should be updated to the latest firmware. The minimum firmware version required is 12.0.19.6.

The latest firmware files can be downloaded from the Netgear website on the relevant product support page.

To update the firmware, go to the "Maintenance" page, select "Browse File", choose the firmware file and click "Upload". This will update the firmware on the switch and once completed it will reboot.

NETGEAR	Dark Theme Save Reboot Question/Help elp admin	
🗑 Configure 🔿	Maintenance Configure Maintenance	
Overview	Firmware Update	
Network Profiles	● 12.0.19.6 ✓ Active ○ 12.0.8.7	
Link Aggregation	Browse File	
Multicast		
Neighbor		
Power over Ethernet	Configuration Management	
Port configuration	Download	
Security	Download the configuration me to jour focal drive for backup.	
Maintenance	Download configuration	
\sim Diagnostics \sim	Restore	
	The configuration will restore to the running-config and startup-config.	
	Browse File Upload	

Select Blustream Network Profile

The Blustream network profile is available on the Netgear switch which will configure all of the network options required automatically.

To select and apply the profile, go to the "Network Profiles" page, scroll down to "Profile Templates" and to the "Blustream Multicast" profile.

NETGEAR	≡			Dark Theme 🌒 🕲 Sav	e つ Reboot Qu	estion/Help 🗸 🕒 admin 🐣
Onfigure ^	Network Profiles					
Overview Network Profiles Link Aggregation Multicast Neighbor Power over Ethernet	M4300-16X	3 4 ↔ Add-Po Select	To To Profile	9 11 12 12 Auto	13 14 -Trunk	Show Legends
Port configuration Security Maintenance	Configured Profiles Profile Name Default	Profile type Data	VLAN ID 1 Total 1 10/page V <	IP Address 192.168.1.1 1 > Go to 1	# of Assigne	Edit the Default Profile VLAN 1 to change its profile template d Ports
	Profile Templates					

Now select the settings icon against the "Blustream Multicast" profile.

Blustream Multicast Works with all Blustream Multicast Video over IP product, including those that feature Dante / AES67	()
Works what an executive handcast video over in product, including drose that reduce burkey (1250)	

BLUSTREA

Now press the "Untag All" button or individually select each port by clicking it once to select the ports to be part of the Blustream Multicast video VLAN. Each port that is part of the Blustream video network VLAN will be shown with a green tick icon.

Enter a VLAN ID, this can be any unused ID, in this example we use "100".

Now click "Apply".

		Profile C	onfigure		×
	Select the	ports where this profile	will apply. "Blustream Multicast"		
	1 3 5	7	9 11	13	15
	2 4 6	8	10 12	14	16
Tag a	0				
LAG					
	Profile Settings Configure your profile settings and preference	25.		PTP	-TC
	Profile Name		Profile Template		
_	Blustream Multicast		Blustream Multicast		\sim
	VLAN ID 100		Color #2F7EC2		
Ľ	Edit VLAN Routing / DHCP Server				
	VLAN IP Settings		VLAN IP Address		
	Subnet Mask				
	DHCP Server				
	Off	~			
		Cancel	Apply		

Save Settings and Reboot

When the popup window closes and the settings have been applied, the ports will now be highlighted in blue and the "Blustream Multicast" VLAN will be shown under the "Configured Profiles" section.

The switch is now fully configured and ready for use with a Blustream video over IP system, save the settings by clicking "Save" at the top of the page and reboot the switch.

NETGEAR	≡			Dark Theme	ම Save ී Reboot Qu	estion/Help × 🕒 admin ×
Onfigure ^	Network Profiles					
Overview	M4300-16X					Show Legends
Network Profiles			T		1	
Link Aggregation	1 0	i, i i i i i i i i i i i i i i i i i i	, 🔼	P , P	13.	1
Multicast	20	4 , 6 ,		10, 12	• ¹⁴ •	16,
Neighbor	Manual-Trunk	Add-Ports-Un	tagged-To-Profile		Auto-Trunk	
Power over Ethernet	Select	✓ Select	~			
Port configuration						
Security	Configured Profiles					Edit the Default Profile VLAN 1
Maintenance	Profile Name	Profile type	VLAN ID	IP Address	# of Assign	to change its profile template
🖏 Diagnostics 🗸 🗸	Default	Data	1	192.168.1.1	N/A	I
	Blustream Multicast	Blustream Multicast	100	N/A	16	I
		Total 2	10/page <	1 > Go to 1		

BLUSTREA///--

Amending your IP Address in Windows

- 1. Connect the computer to the network switch using an Ethernet cable
- 2. Navigate to: CONTROL PANEL / NETWORK & INTERNET / NETWORK CONNECTIONS
- 3. Double click on the Ethernet conneciton as highlighted below:



4. In the pop-up windown that appears, click on: **PROPERTIES**

Ethernet Status	;		×
/ General			
Connection IPv4 Connectiv IPv6 Connectiv Media State: Duration: Speed: Details	ity: ity:	No network access No network access Enabled 00:01:47 100.0 Mbps	
Activity ———	Sent —	Received	
Bytes:	5,507,096	135,468,562	
Properties	Disable	Diagnose	
		Close	

5. In the pop-up window that appears, double-click on: **INTERNET PROTOCOL VERSION 4 (TCP/IPv4)**

Connect u	sing:			
🚅 Rea	ltek PCIe FE F	amily Controller		
			Config	ure
This conne	ection uses the	following items:		
	le and Printers o <u>S Packet Sel</u> itemet Protoco icrosoft Netwo icrosoft LLDP itemet Protoco	Sharing for Microso heduler I Version 4 (TCP/IF rk Adapter Multiple Protocol Driver I Version 6 (TCP/IF	ft Networks 2v4) xor Protocol 2v6)	>
<		I Induction at all	Proper	ties
< Inst	all	Uninstall		

5. In the pop-up window that appears, double-click on the radial button marked: USE THE FOLLOWING IP ADDRESS6. Enter the details as below:

IP Address: [choose an address inline with the switch default IP address] Subnet mask: 255.255.255.0

Default gateway: *Leave this field blank*

ļ	nternet Protocol Version 4 (TCP/IPv4) Properties	×
1	General	
	You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.	
	Obtain an IP address automatically	
<	• Use the following IP address:	
E	IP address: 192 . 168 . 1 . 1	
	Subnet mask: 255 . 255 . 0	
	Default gateway:	
۵	Obtain DNS server address automatically	
	O Use the following DNS server addresses:	
	Preferred DNS server:	
	Alternative DNS server:	
	Validate settings upon exit Advanced	
	OK Cancel	

7. Click: OK / OK / CLOSE

Your Windows PC will now be working in the IP range as set above and you will now be able to communicate with the equipment working within the same IP range.

BLUSTREA

Amending your IP Address in Mac OS

- 1. Connect the Mac to the network switch using an Ethernet cable
- 2. Click on the Settings app
- 3. Click on 'Network' in the left hand file tree
- 4. Select the hardwired network adaptor / port connected to the switch

Apple USB Ethernet Adapter Onnected	
Sonnected	
🔁 Firewall	

Netgear AV Line SETUP GUIDE

- 4. Click the 'Details' button
- 5. Select TCP/IP from the left hand file tree
- 6. Use the drop down box for 'Configure IPv4' to select 'Manually'
- 7. Enter the details as below:

IP Address: [choose an address inline with the switch default IP address]

Subnet mask: 255.255.0.0

Router: *Leave this field blank*

• • •	Apple USB Ethernet Adapte	ər.
Q Search	Apple USB Ethernet Adapter	Details
Aiden Jones		
Apple USB Ethernet Ad Connected	Configure IPv4	Manually 📚
TCP/IP	IP address	192.168.1.2
DNS WINS	Subnet mask	255.255.0.0
802.1X	Router	
Proxies		
Hardware	Configure IPv6	Automatically 🗘
	Router	Router
8		
6		
		Cancel OK
Deskup & Dock		
Displays		

8. Click: **OK** at the bottom of the page and close.

Your Mac will now be working in the IP range as set above and will now be able to communicate with the switch working within the same IP range.



www.blustream.com.au www.blustream-us.com www.blustream.co.uk